350 ³⁄4"- 2"









Check Housing Removal

- The plastic housing (vessel) must be removed for service.
- There is no spring load.
- Housing is bolted and o-ring sealed.
- Remove the four housing bolts.
- Lift the vessel up and out.





Check Valve Removal 3/4"-1"

Check valve modules.
Modules are located inside the housing.
Modules are sealed by o-rings.
Both modules slide toward the outlet of

the housing.





Check Valve Removal 11/4"-2"

- The check valves are held in place by a closure sleeve.
- Gently pry the closure sleeve away from the body.
- Both modules must slide out of the housing.
- Use a short blunt object on a flat surface to push against the #2 check.





Check Valve Removal 11/4"-2"

Make sure all test cocks are open to break any vacuum.


Push down on the body to slide the modules out.





Disassemble Check Module ³/₄"-1"

- Modules are spring loaded.
- Locate the notch between the seat and tailpiece of each check.
- Holding the module firmly, twist and snap apart with a screwdriver.

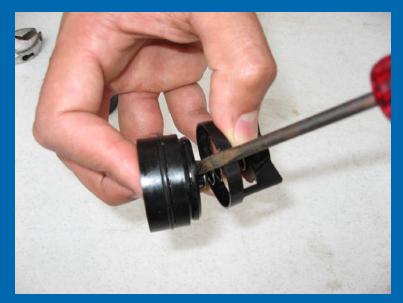




Disassemble Check Module 11/4"-2"

Hold the cage firmly and twist the seat counter-clockwise about ¼ turn.

Check modules are spring loaded.

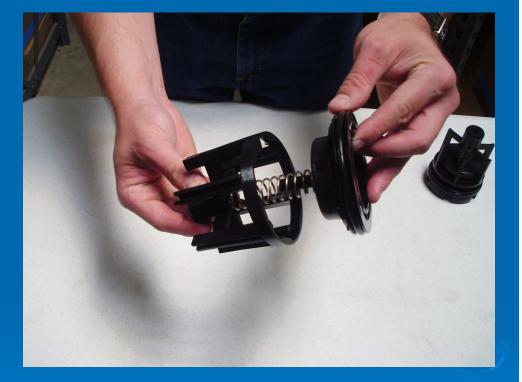

Check Seat Removal

The check seat is free once the module has been disassembled.

If seat is damaged, the entire module must be replaced.





Check Disc Replacement

- The check disc and poppet are free once the module has been disassembled.
- 3⁄4-1" disc and poppet must be replaced as one component.
- > 11/4-2" check disc is free once the retainer is removed.





Check Valve Reassembly Notes

3/4"-1"

- Reassemble in reverse order.
- Lubricate o-rings on check modules and slide back into housing.
- Make sure checks are in the correct order and facing the correct direction.





Check Valve Reassembly Notes 11/4"-2"

- Lubricate o-rings on check modules.
- #2 check slides into vessel first.
- Insert the #1 check and turn it until the spring retainer lines up with the notches on the #2 seat.
- Push both modules into the vessel.





Check Valve Reassembly Notes 11/4"-2"

Lubricate the o-ring on the closure sleeve and insert against the modules.

Place on a flat surface and push down with a "rocking motion" until the sleeve seals with the vessel.





Housing Reassembly Notes 3/4"-1"

Lubricate the inlet and outlet o-ring on the housing.

When installing housing, match slight taper on the outlet of the housing with the taper in the body.





Housing Reassembly Notes 11/4"-2"

- Lubricate the inlet and outlet o-ring on the housing.
- "Rock" the vessel from side to side as it slides into position.
- * Note: Make sure the o-rings on both ends of the vessel stay in their groove as it slides into place.



