


719 / 200B

919 / 400B

$\frac{3}{4}$ "-2"

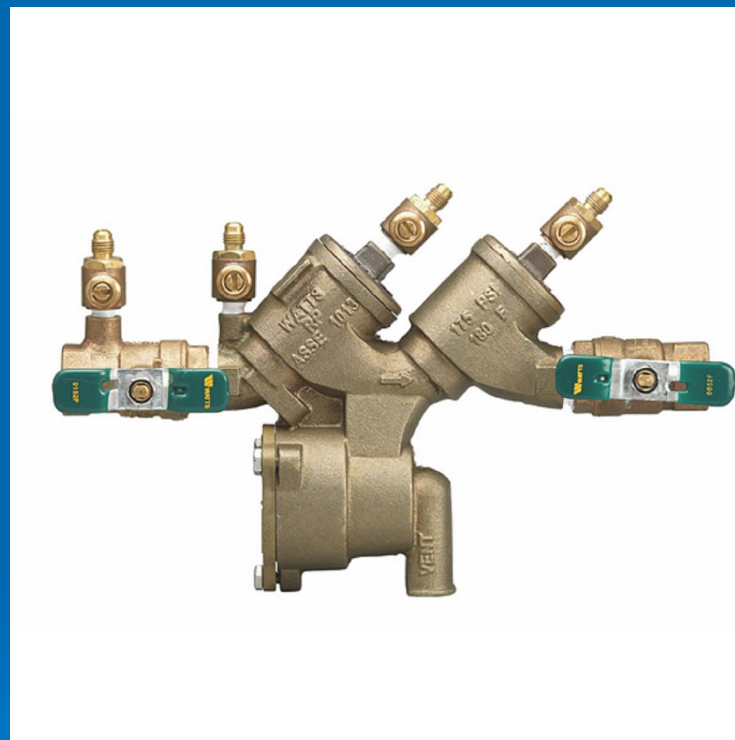

WATTS[®]

Check Cover Removal

- Cover is threaded into body and o-ring sealed.
- Cover is spring loaded.



Check Valve Removal

- Poppet style check assembly.
- The poppet and spring are free once the cover is removed.




Check Seat Removal

- The check seat or (cage) is pushed into the body and o-ring sealed.
- Simply pull the seat straight out of the body.




Check Disc Replacement

- Remove screw and disc washer from poppet.

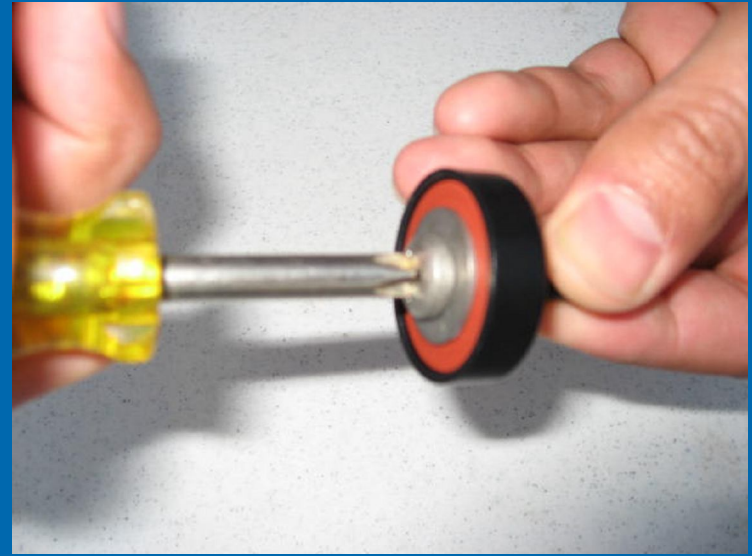



Check Valve Reassembly Notes

- Inspect and clean the guide bore on the cover.
- The stem must move freely in the guide.
- Reassemble in reverse order.

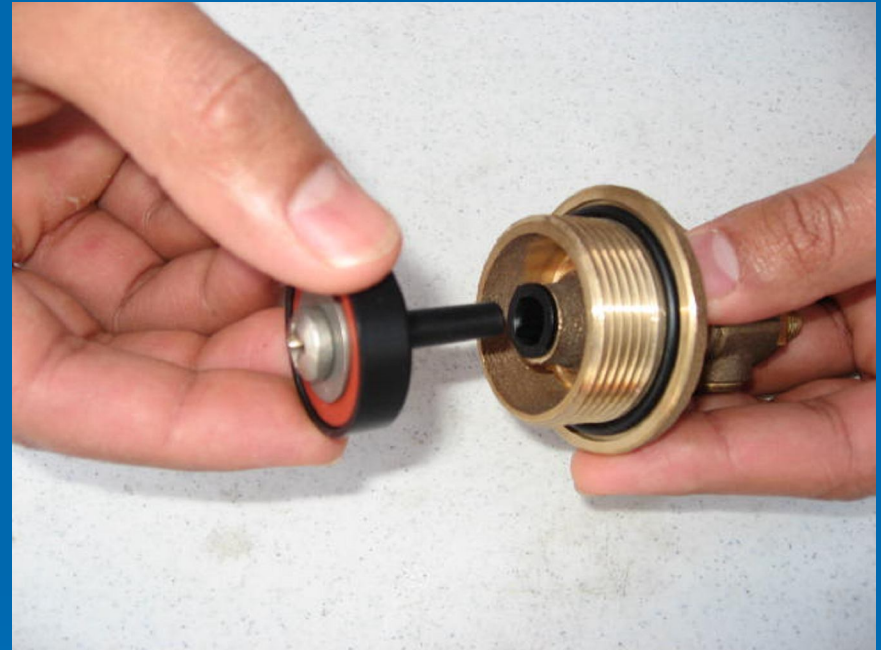

RV Cover Removal

- Cover is spring loaded.
- RV cover is o-ring sealed.
- While holding cover firmly, remove cover bolts and rotate the cover 1/4 turn.

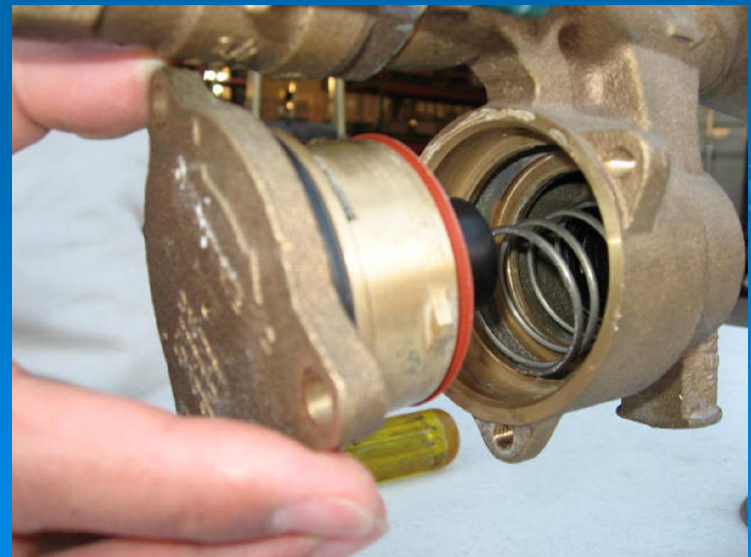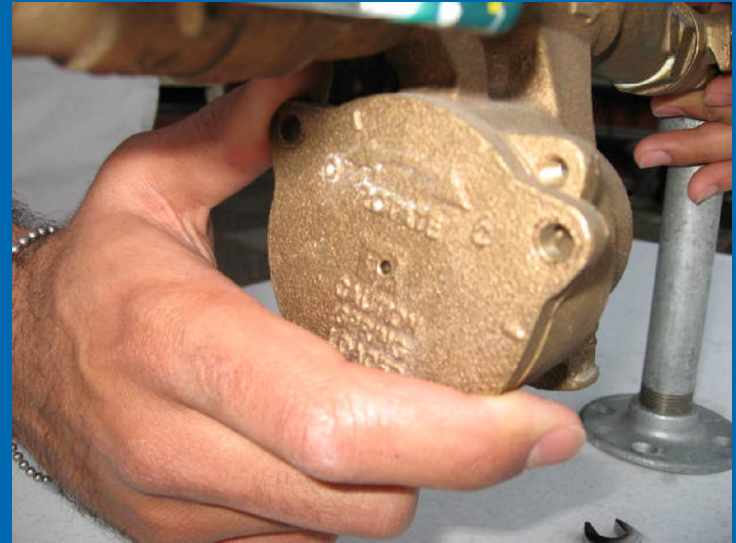

RV Module Removal

- The RV stem and spring are free once the cover is removed.



RV Seat Removal

- The RV seat is o-ring sealed.
- Simply pull the seat straight out of the body.



RV Stem Disassembly

- Use a wrench to gently loosen the RV stem assembly.



RV Diaphragm Replacement

- Diaphragm is free once stem is disassembled.
- The molded step of the diaphragm should point towards the RV stem and disc.



RV Disc Replacement

- The RV disc is free once the retaining screw is removed.



RV Reassembly Notes

- Reassemble in reverse order.
- Line up the grooves on the cover with the grooves in the body, and turn the cover clockwise $\frac{1}{4}$ turn.

